


1. Die-cut the back, two side panels and wax seal out of desired material. Apply adhesive to the long tabs on the inside of the side panels.

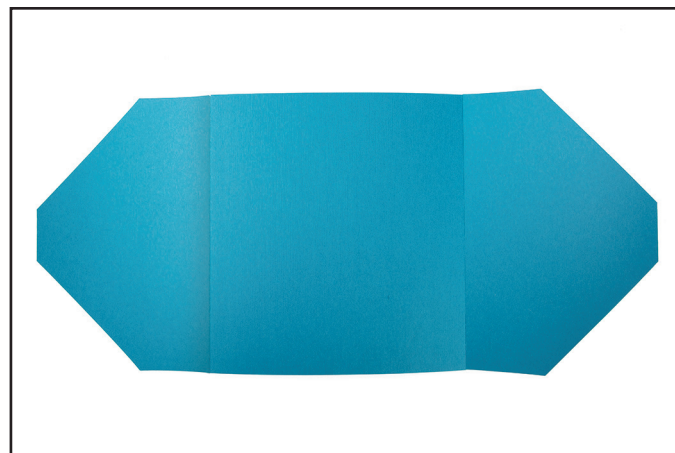

2. Fold along the vertical crease lines, and adhere the long tab to the inside of the corresponding edge. Place adhesive on two opposing bottom flaps. Fold inward the two bottom flaps without adhesive. Fold and adhere the remaining two bottom flaps in place.



3. Fold the side panels closed, and embellish as desired.